

INSTALLATION GUIDE FOR THE ESP 360 REMOTE


Step 1: Insert the base of the ESP 360 Remote into the case and make sure that all the openings align, as well as the 3 holes in the PCB with the 3 plastic pins.



Step 2: Insert the RF modules into the upper part of the PCB as shown in the picture and manually raise the infrared LEDs to a 45° angle. They are currently bent horizontally for transportation safety reasons.



Step 3: Insert the top PCB all the way into the base through the 8-pin connector.

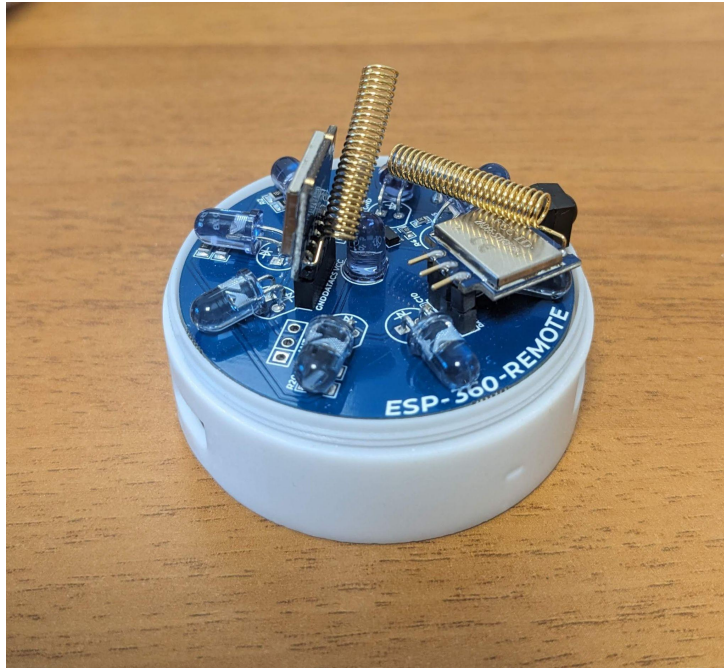

Step 4: Close the case by screwing the top part, plug in the power cable, and enjoy your ESP 360 Remote!

